



PRODUCT DESCRIPTION

The LifeTec™ PES BN 0.45 filter element is an absolute grade rated, pleated high performance Polyethersulfone membrane filter. It provides the greatest assurance of filtration performance, stability and service life for sterile filtration and microbial stabilization of highly colloidal liquids.

The outstanding performance of the LifeTec™ PES BN filter element is based on its state-of-the-art filtration media. The Polyethersulfone membrane is inherently hydrophilic and distinguishes itself by having an asymmetrically designed pore structure. The pore size steadily decreases towards the centre of the medium resulting in a highly porous structure. This extremely durable design maintains consistent porosity and impurity retention throughout its service life without shedding or unloading contaminations.

All components meet the EU and USA requirements for food contact use in accordance with CFR (Code of Federal Regulations) Title 21 and EC/1935/2004 and subsequent amendments.

The filter element is manufactured in accordance with the GMP requirements as defined in EC/2023/2006, has no migration of filter media and is thermally welded. All LifeTec™ liquid elements are flushed with deionised water during manufacture.

MAIN FEATURES AND BENEFITS

- Absolute grade rating of 0.45 µm
- Excellent flow rate
- Highly resistant materials
- Highly asymmetrical membrane design
- High thermal and hydrolytic stability
- Approved for food contact use acc. to CFR Title 21 and EC/1935/2004

Materials used are free of any Substances of Very High Concern (SVHC) as defined in EC/1907/2006 and EC/65/2011.

Based on the available material data, supplier information, and our current state of knowledge, the products do not contain any intentionally added PFAS within the meaning of the ECHA definition.

INDUSTRIES



- Breweries



- Wineries



- Beverages



- Soft Drinks and Water



- Chemical Industry

APPLICATIONS

The absolute rated LifeTec™ PES BN membrane filter is designed and developed for the filtration of highly colloidal liquids.

Clarification and cold sterilization of beverages like:

- Beer
- Beer Mix
- Wine
- Wine Coolers

Clarification and final filtration of:

- Deionized Water
- Chemically Treated Water
- High Temperature Water
- Process Water
- Ingredient Water
- Soft Drinks
- Bottled Water

QUALITY TEST

All products have been inspected and released by Quality Assurance as having met the following requirements:

- All 10-inch sterile filter modules are integrity tested to verify compliance with established quality and design specifications and to assure consistent and reliable performance.
- The traceability of each filter element according to EC/1935/2004 is provided by serial number.
- All LifeTec™ PES BN filter elements are completely staged, assembled, tested and packaged in Class 7 clean room facility whose Quality Management System is approved by an accredited registering body to the appropriate ISO 9001 Quality Systems Standard.

MATERIAL COMPLIANCE, USA

All components of the LifeTec™ PES BN filter element are FDA listed for food contact use in the Code of Federal Regulations (CFR), Title 21:

Filter Materials		CFR Title 21
Membrane	Polyethersulfone	§ 177.2240
Upstream Support	Polypropylene	§ 177.1520
Scrim	Polypropylene	§ 177.1520
Outer Guard	Polypropylene	§ 177.1520
Core	Polypropylene	§ 177.1520
End Caps	Polypropylene	§ 177.1520
O-rings	EPDM	§ 177.2600
	Silicone	§ 177.2600
Sealing Method	Thermal Bonding	

MATERIAL COMPLIANCE, EU

The Donaldson LifeTec™ PES BN filter element meets the guideline for food contact use as given in European Regulation (EC) Number 1935/2004. All polymeric components (Polypropylene, Polyethersulfone) meet the requirements of EU Directive EC/10/2011 relating to plastic materials and articles intended to come into contact with foodstuffs. Migration tests have been carried out in simulants (B, D1) after flushing or in flow conditions. Materials used are free of any Substances of Very High Concern (SVHC) as defined in EC/1907/2006 (REACH Guideline) and EC/65/2011 (RoHS Guideline) and are free of any Latex-based components. The PP materials used for cage and core are treated according to EMA/410/01 Rev.03 and thus bear no risk of transmitting Transmissible Spongiform Encephalopathy (TSE) and Bovine Spongiform Encephalopathy (BSE).

RETENTION RATES (According to HIMA Challenge per ASTM)


Filter Grade	Microorganism	LRV / cm ²
0.45 µm	Serratia marcescens	>7
	Oenococcus oeni	>7
	Saccharomyces cerevisiae	>10
	Dekkera bruxellensis	>10

PRODUCT SPECIFICATIONS

Product Specifications				
Filter Grade	0.45 µm (absolute retention rate)			
Filtration Surface	0.71 m² per 250 mm element (10 inch)			
Maximum Differential Pressure	Operating Temperature		Differential Pressure	
	°C	F	bar	psi
	38	100	> 15	217
	66	150	> 11	159
	82	180	> 9	130
Cumulative Steaming Time*	121-125 °C (20 minutes) saturated steam (forward flow) more than 75 cycles			

*Tested in laboratory environment per stated specifications. Actual number of cycles depends on application and process conditions.

FLOW CHARACTERISTICS

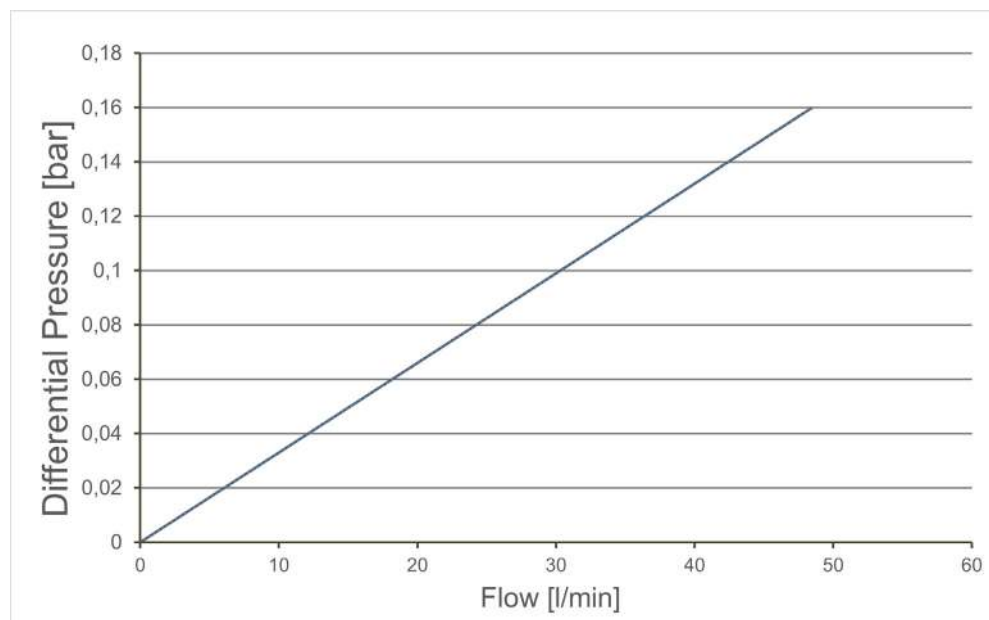


LifeTec™ PES BN

10-inch, Deionized Water, 20 °C


INTEGRITY TESTING

Diffusion Test / Forward Flow Test	
Filter Grade	Maximum Diffusion Values
0.45 µm	25 mL/min @ 1500 mbar (21.76 psi)

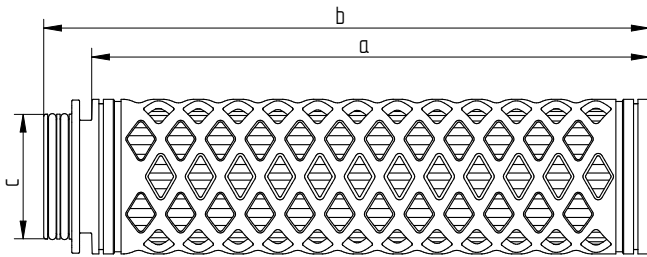


Dimensions (CODE 2 Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	253	10.0	274	10.8	56	2.2
20"	495	19.5	516	20.3	56	2.2
30"	737	29.0	758	29.8	56	2.2
40"	979	38.5	1000	39.4	56	2.2

CODE 2: 2 x 226 O-rings, bayonet 2 locking tabs, flat end cap, integrated reinforcement ring

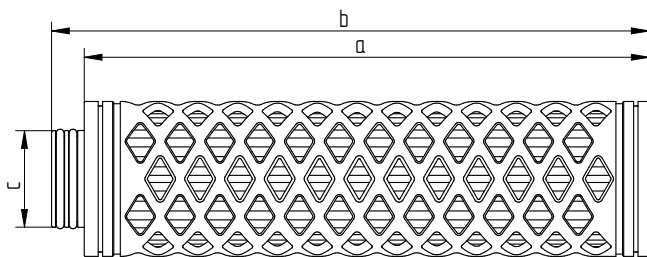


Dimensions (CODE 3 Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	256	10.1	271	10.7	44	1.7
20"	498	19.6	513	20.2	44	1.7
30"	740	29.1	755	29.7	44	1.7
40"	982	38.7	997	39.3	44	1.7

CODE 3: 2 x 222 O-rings, plug connection, flat end cap, integrated reinforcement ring

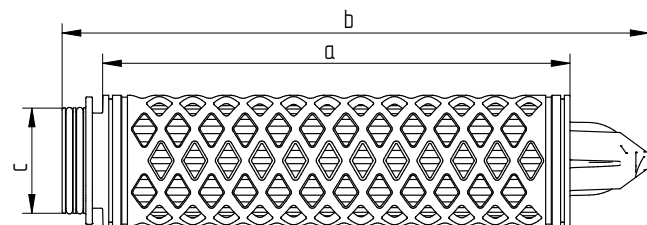


Dimensions (CODE 7 Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	251	9.9	315	12.4	56	2.2
20"	493	19.4	557	21.9	56	2.2
30"	735	28.9	799	31.5	56	2.2
40"	977	38.5	1041	41.0	56	2.2

CODE 7: 2 x 226 O-rings, bayonet 2 locking tabs, locating fin, integrated reinforcement ring

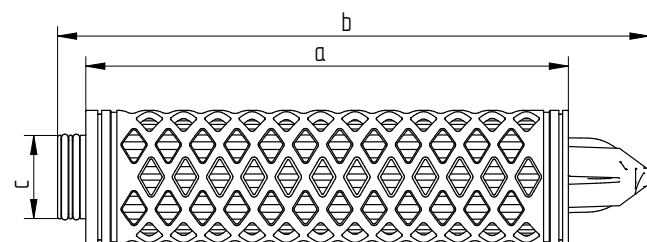


Dimensions (CODE 8 Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	254	10.0	311	12.2	44	1.7
20"	496	19.5	553	21.8	44	1.7
30"	738	29.1	795	31.3	44	1.7
40"	980	38.6	1037	40.8	44	1.7

CODE 8: 2 x 222 O-rings, plug connection, locating fin, integrated reinforcement ring

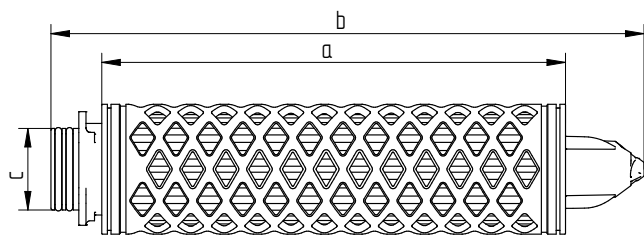


Dimensions (CODE 9 Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	250	9.8	320	12.6	44	1.7
20"	492	19.4	562	22.1	44	1.7
30"	734	28.9	804	31.7	44	1.7
40"	976	38.4	1046	41.2	44	1.7

CODE 9: 2 x 222 O-rings, bayonet 3 locking tabs, locating fin, integrated reinforcement ring

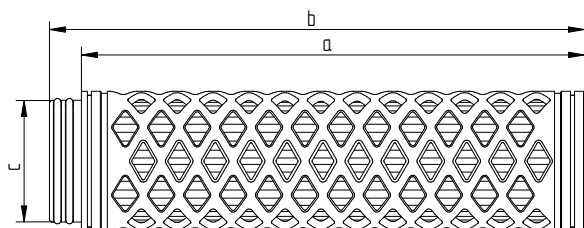

Dimensions (UF Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	252	9.9	268	10.6	61	2.4
20"	494	19.4	510	20.1	61	2.4
30"	736	29.0	752	29.6	61	2.4

CODE UF: 2 x 226 O-rings, plug connection, flat end cap, integrated reinforcement ring

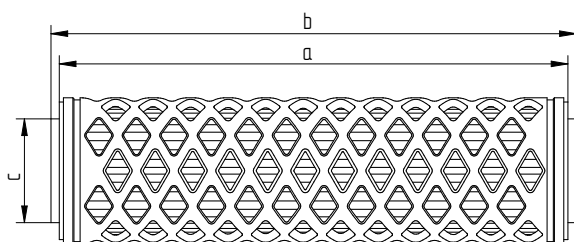

Dimensions (DOE Connection)						
Size	a		b		c	
	mm	inch	mm	inch	mm	inch
10"	244	9.6	250	9.8	50	2.0
20"	500	19.7	506	19.9	50	2.0
30"	754	29.7	760	29.9	50	2.0
40"	1008	39.7	1014	39.9	50	2.0

DOE: Double Open End with EPDM gaskets

Other end cap configurations are available upon request.

Integrity test to be done by Bubble Point or Forward Flow Test

For information on test equipment or test services, please contact your Donaldson Sales Engineer and visit our website at www.donaldson.com



donaldson.com/process

Donaldson Company, Inc.
Minneapolis, MN

Contact us



Important Notice: Many factors beyond the control of Donaldson can affect the use, performance, or results of Donaldson products or services in a particular application, including the conditions impacting how the products or services are selected, used, installed, or maintained. Because these factors are uniquely within the user's knowledge and control, it is essential the user evaluate both the products and any related services to determine their suitability for the user's intended purpose and application, including fitness for the particular purpose. All products, services, product specifications, availability and data are subject to change without notice and may vary by region or country.

F119032 ENG (05/26) LifeTec™ PES BN ©2026 Donaldson Co., Inc. Donaldson and the color blue are marks of Donaldson Company, Inc. All other marks belong to their respective owners.